

# KAMAI HYBRID TV MEDIA PLAYER

500 Series Product Manual



**entone**<sup>®</sup>

## Table of Contents

### OVERVIEW

- 2 What's Included
- 4 Front and Rear Panel
- 5 Side Panel

### CONNECTING VIDEO

- 6 High-Definition TVs
- 7 Standard-Definition TVs

### CONNECTING AUDIO

- 8 Stereo
- 9 Surround Sound

### CONNECTING TV SOURCE

- 10 Cable or Antenna

### CONNECTING NETWORK

- 11 Wireless or Wired

### POWERING UP

- 12 Setting up Remote Control
- 13 Connecting to Power Source

#### COPYRIGHT

©2012 Entone, Inc. All rights reserved. This document contains proprietary information protected by copyright. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written consent of Entone, Inc., 20863 Stevens Creek Blvd, Suite 300, Cupertino, CA 95014, U.S.A.

#### DISCLAIMER

IF THIS PRODUCT DIRECTS YOU TO COPY MATERIALS, YOU MUST HAVE PERMISSION FROM THE COPYRIGHT OWNER OF THE MATERIALS TO AVOID VIOLATING THE LAW WHICH COULD RESULT IN DAMAGES OR OTHER REMEDIES.

#### TRADEMARKS

Entone and the tagline "Connecting the Home" are trademarks of Entone, Inc. All other trademarks or registered trademarks belong to their respective owners.

#### CHANGES

The material in this document is for information only and is subject to change without notice. While reasonable efforts have been made in the preparation of this document to assure its accuracy, Entone, Inc. assumes no liability resulting from the use of the information contained herein. Entone, Inc. reserves the right to make changes in the product design without reservation and without notification to its users.

 
# What's Included



Kamai Hybrid TV Media Player



IR Remote Control\*



2 Batteries for Remote Control



Kamai Product Manual



Remote Control Guide\*



DIN-to-RCA Cable



Ethernet Cable (Optional)



HDMI Cable (Optional)



AC Power Adapter\*

## Additional items that may be required (not included):

- Ethernet Cable
- HDMI Cable
- RF Coaxial Cable
- Digital Audio Cable
- Network Router

\*The Remote Control may vary and is dependent on your service provider.

\*The AC Power Adapter may vary and is dependent on your service provider.


## Kamai — Front and Rear Panel



Name	Description
1 Power Indicator	Solid blue indicates the unit is on Flashing blue indicates the unit is starting up
2 Antenna/Cable Connector	IEC/F port for connecting to cable / antenna source (tuner is optional item)
3 Digital Audio	S/PDIF digital optical audio TOSLINK output
4 SD Video	9-Pin DIN conector for connecting to video output using DIN-to-RCA cable
5 HDMI	Digital video and audio port for connecting to a high-definition TV (HDTV)
6 Ethernet	RJ45 plug for connecting to ADSL modem or network access equipment
7 Power	DC power jack (100-240V, Output 12V/1A)

Availability of certain features is dependent on your service provider.

## Kamai — Side Panel

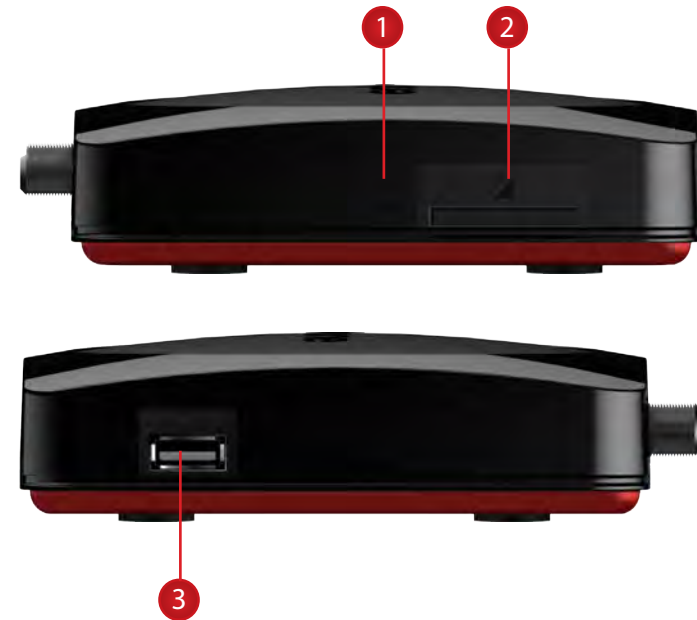

Name	Description
1 Factory Reset	Reset the device to factory settings with a thin metal probe
2 SD Card Reader	SD Memory Card Reader For accessing media on an SD memory card
3 USB	To connect USB devices such as USB Flash Drive and External Hard Drive (max 500mA load)

Availability of certain features is dependent on your service provider.

## STEP 1: CONNECTING VIDEO

Kamai provides two video options for connecting to your TV: HDMI or Composite Video. Select a video option and proceed accordingly.

Make sure your TV is turned on and the correct video input is selected.


### Option 1: HDMI (Recommended)

If your TV has an HDMI connection, use an HDMI cable (may not be included) and connect Kamai to the HDMI IN port on your TV. This connection provides both video and audio so you do not need a separate audio connection. Proceed to "Connecting TV Source" on page 10.



### Option 2: Composite Video

Use the DIN-to-RCA cable provided and connect the yellow cable to the yellow VIDEO IN port on your TV. Then proceed to the next step ("Connecting Audio") to connect the red/white cables.

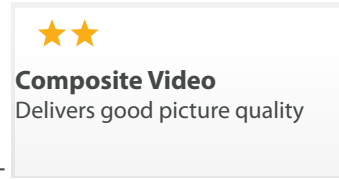

If you have already selected HDMI as your video connection, then do not use this cable.




## STEP 2: CONNECTING AUDIO

Kamai has two audio options: Stereo or Surround Sound. Select an audio option and proceed accordingly.

**NOTE:** If you have already selected HDMI as your video connection, then skip this audio section and proceed to "Connecting TV Source".


### Option 1: Stereo

Use the DIN-to-RCA cable provided and connect the red/white cables to the AUDIO IN port on your TV.

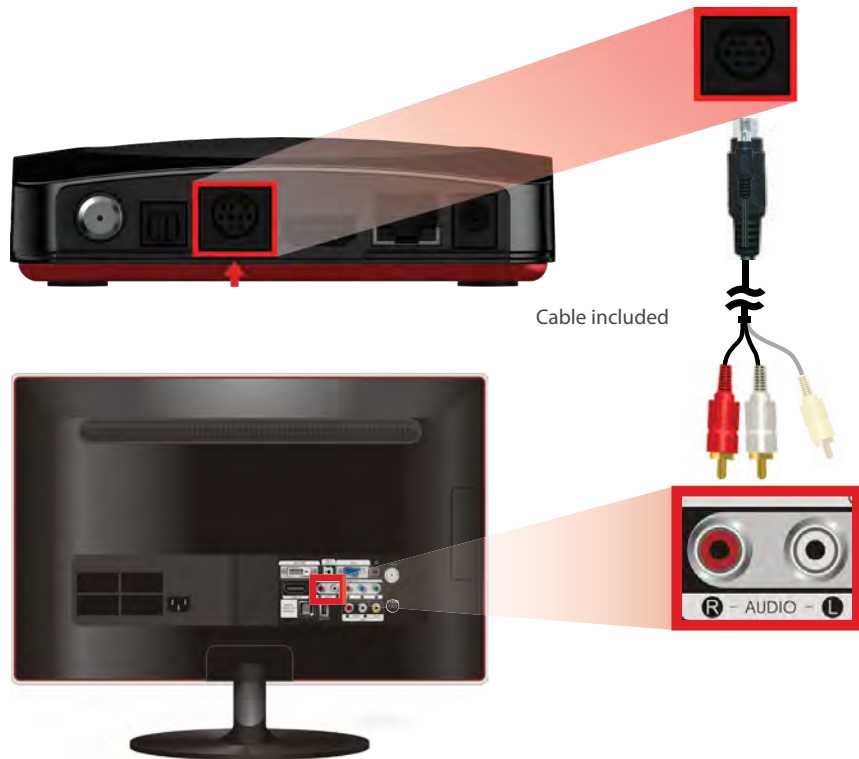

### Option 2: Surround Sound


If your TV is connected to an A/V Receiver that supports Dolby Digital 5.1 Surround Sound, use a digital audio cable (sold separately) to connect Kamai to the OPTICAL AUDIO IN port on your A/V Receiver.

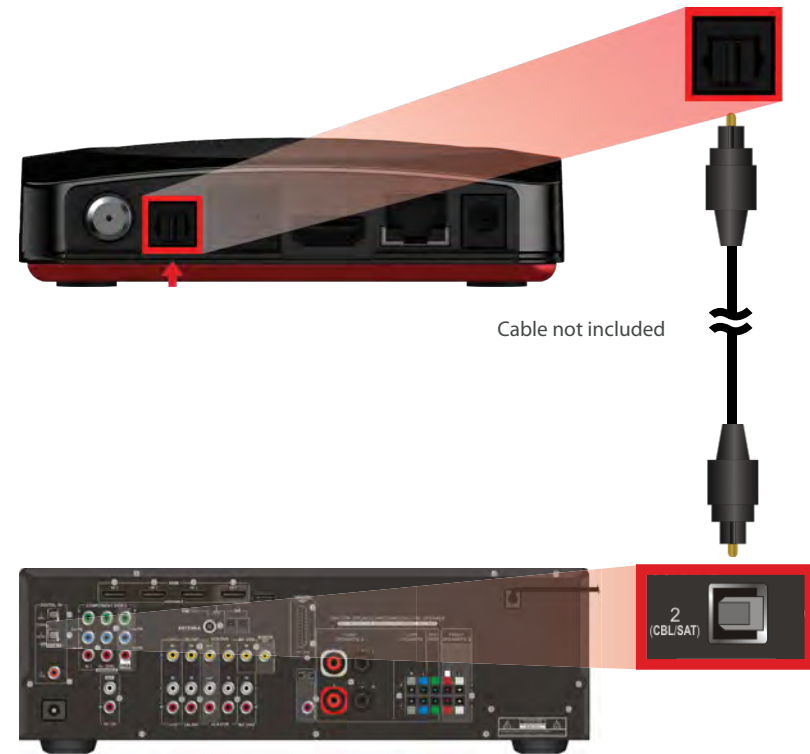

### STEP 3: CONNECTING TV SOURCE

Connect an RF coaxial cable (sold separately) from Kamai to either a basic unencrypted Cable TV source or antenna source.

**NOTE:** A built-in tuner for receiving off-air programs is an optional feature of Kamai. Contact your service provider for more details.

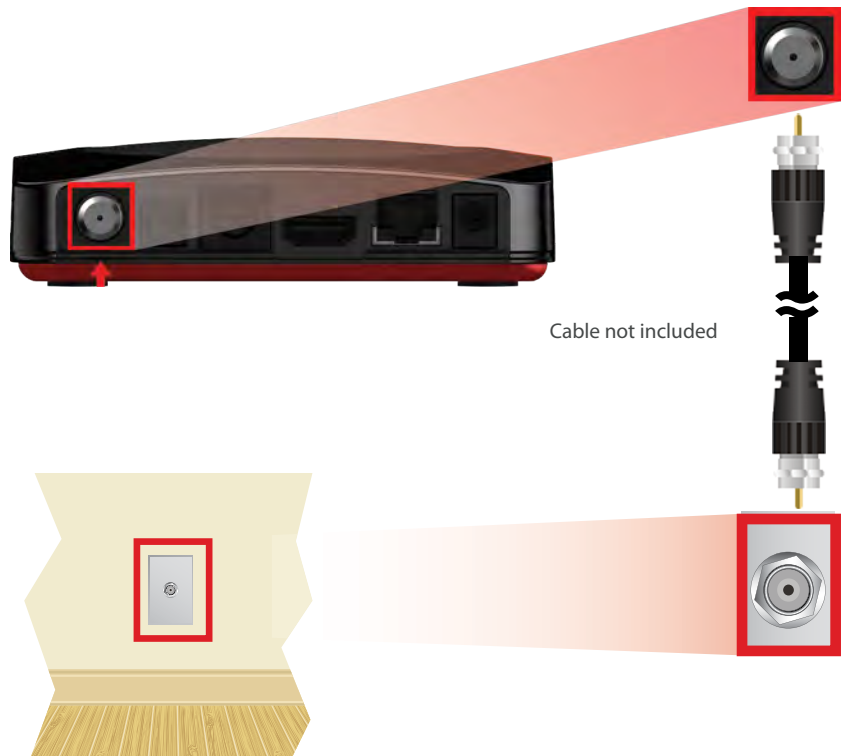

### STEP 4: CONNECTING NETWORK

Select from one of the following networking options.


#### Option 1: Wireless

Connect your Kamai to a Wireless Network Router or Access Point.

**NOTE:** Internal Wi-Fi is an optional feature for Kamai. Contact your service provider for more details and instructions about the wireless network configuration.

#### Option #2

Connect an Ethernet cable (sold separately) from Kamai to a cable/DSL modem or Network Router.

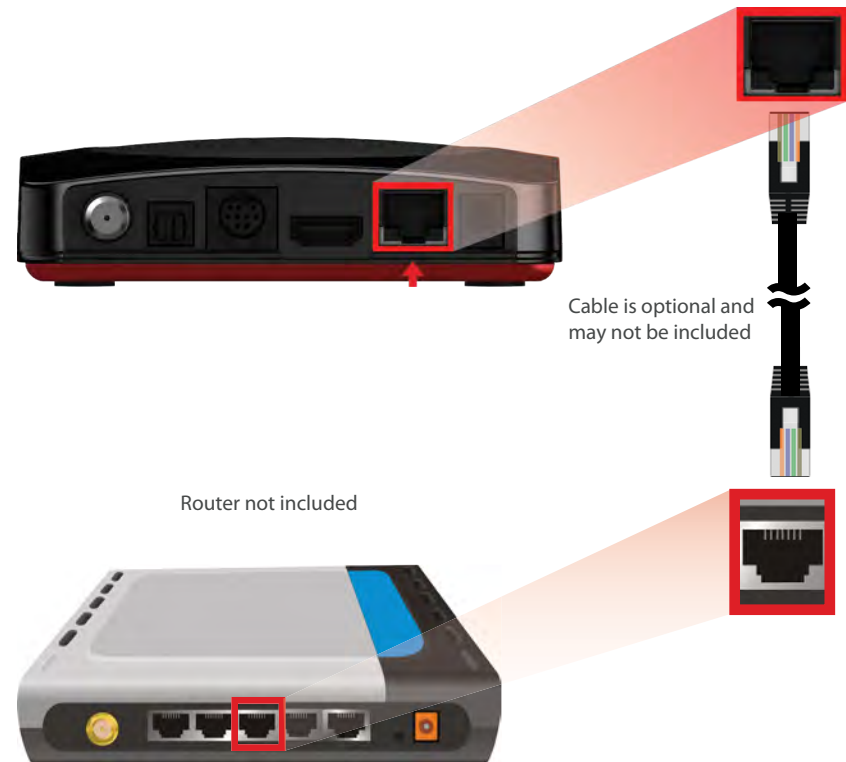



## STEP 5: POWERING UP

### Setting Up Remote Control


1. Open the battery cover by pressing down on the battery cover latch and sliding it off.
2. Insert the batteries, matching the "+" and "-" marks on the batteries with the interior of the remote control.
3. Snap on the battery cover to close.

**NOTE:** Refer to the Remote Control Guide for more details about other remote control features.

### Connecting to Power Source

1. Connect the power cord to the POWER port on the back of the Kamai.
2. Plug the AC power adapter to a power outlet.
3. Follow the on-screen instructions.

**NOTE:** Make sure your TV is turned on and the correct video input is selected.

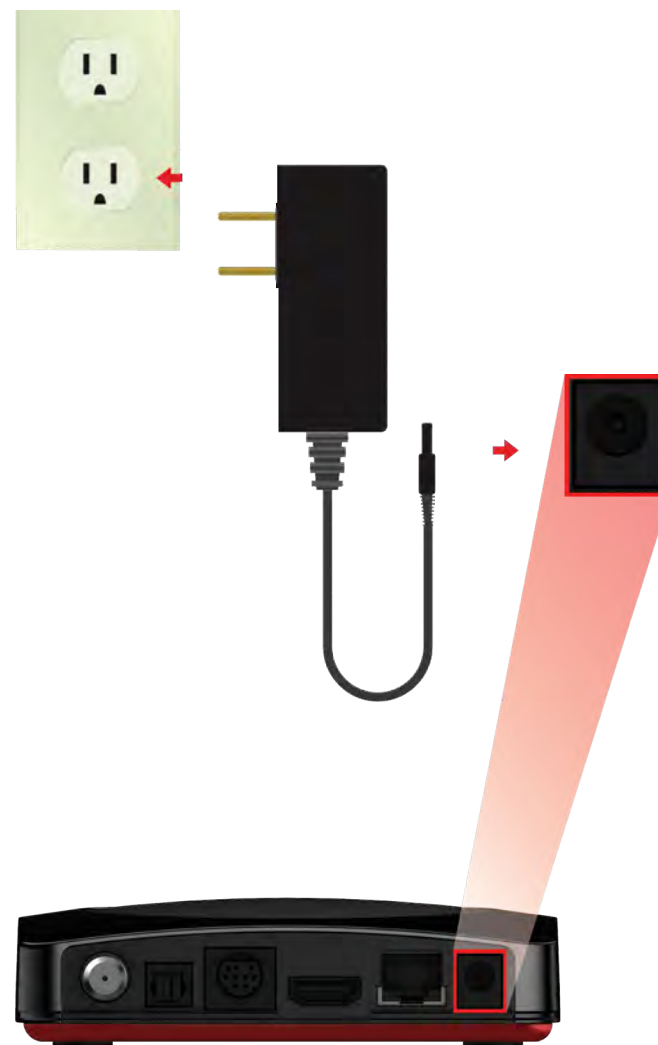



**entone**<sup>®</sup>

©2012 Entone, Inc. Entone, Kamai and connecting the home are trademarks of Entone, Inc. Other company, product, and service names may be trademarks or service marks of others. All information contained in this document is subject to change without notice. Information contained in this document is provided on an as is basis. In no event will Entone be liable for damages arising directly or indirectly from any use of the information contained in this document. Subject to change without notice.